

# Coastline Glider

## Sash Removal Service Instruction

## Coastline Glider Instrucciones de Servicio

**ABSTRACT:** This instruction is for the removal of the sash of a Coastline Glider.

**EXTRACTO:** Esta instrucción es para quitar la panel de un Coastline Glider.

### **WARNING!**

In case of a large Coastline Glider Sash, two people should remove the sash.

### **ADVERTENCIA!**

En el caso de que el panel del Coastline Glider sea grande, utilice dos personas para retirarlo.



Figure 1

1. Unlock and slide open sash to be able to grip the sash stile when removing the sash.

**Quite el seguro y deslice el panel para poder sujetarlo a la hora de retirarlo.**



Figure 2

2. Remove top Edge Cover from each sash stile by sliding Edge Cover upward and remove. [See Figure 2](#)

**Retire el protector superior de cada perfil lateral del panel deslizando hacia arriba. Ver Figura 2.**

### **WARNING!**

In case of a large Coastline Glider Sash, two people should remove the sash.

### **ADVERTENCIA!**

**En el caso de que el panel del Coastline Glider sea grande, utilice dos personas para retirarlo.**



Figure 3



Figure 4

3. Hold the sash closer to the bottom, lift sash upward and pull out at bottom, lower sash to remove from header and remove sash. [See Figure 3 and Figure 4.](#)

**Sostenga el panel cerca de la parte inferior, levante hacia arriba y hale la parte inferior, baje el panel para quitarlo del marco. Ver Figura 3 y Figura 4.**

4. To reinstall the sash, reverse the process to remove the sash.

**Para instalar el marco, haga el proceso inverso de quitar el marco.**