Crank Pole

Field Applied Instruction

You Will Need to Supply

Jewelers flat head screwdriver
Step ladder of appropriate height
Safety glasses

MINIMUM PARTS REQUIRED FOR OPERATION		
Illustration	**Description**	**Part Number**
	Crank Pole (1/project) 60″ (1524) 96″ (2438) 138″ (3505)	 01590321 01590411 05540711
	Adaptor (1/unit) UCA/UAWN	05570441 05570447

Crank Pole Operation

The crank pole is positioned over an adapter and the crank at the bottom of the pole is turned to operate the window. When the window has been cranked to the desired position the pole is removed and can be stowed away until needed again. One pole can operate an unlimited number of windows fitted with an adaptor.

Note: The crank pole is available in 60″, 96″ and 138″ lengths. An adapter is necessary for use with the crank pole and fits over the handle post (or accessory) on either a casement or awning window. Additional accessories are a universal with insert and 2″ or 4″ extensions for casement or awning windows. See Parts Manual for part numbers.

Prepping the Unit

1. Remove the crank handle on your casement or awning window by loosening the set screw on the base of the handle and then pulling up on the handle to remove. See figure 1.

Figure 1

2. Install the pole crank adapter by placing the adapter over the handle post and tightening the set screw. See figure 2.

Figure 2

3. Unlock the window and position the crank pole over the adapter. See figure 3. Turn the handle on the crank pole to the operate window.

Figure 3

4. Crank pole kit accessories installed on a window unit. See figure 4.

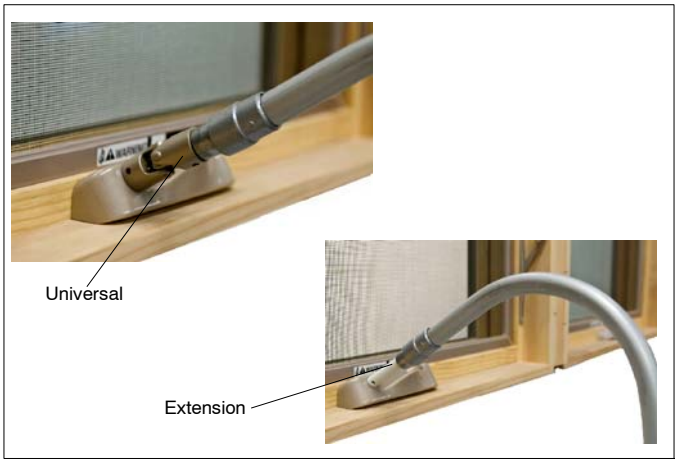

Figure 4