

Ultimate Swinging French Door Handle Installation Instructions

ABSTRACT: This instruction is intended for units produced after August 1, 2000.

Tip

If you stand straddling the sill of the door with your back to the hinge of the operating panel, notice which hand you would use to reach out and close the door. This indicates right or left handed. See Figure 1.

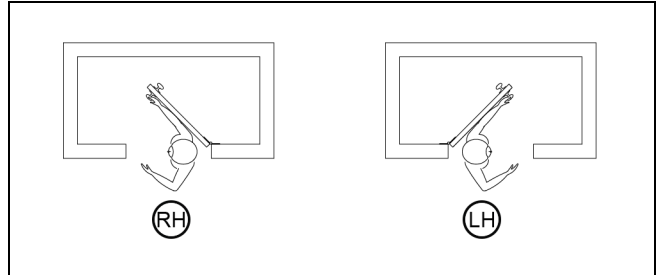


Figure 1

Trimming the Tail Piece

1. Before installing the lock cylinder you will need to trim the tail piece to the appropriate length. Refer to Figure 2 for the correct location based on your door configuration.

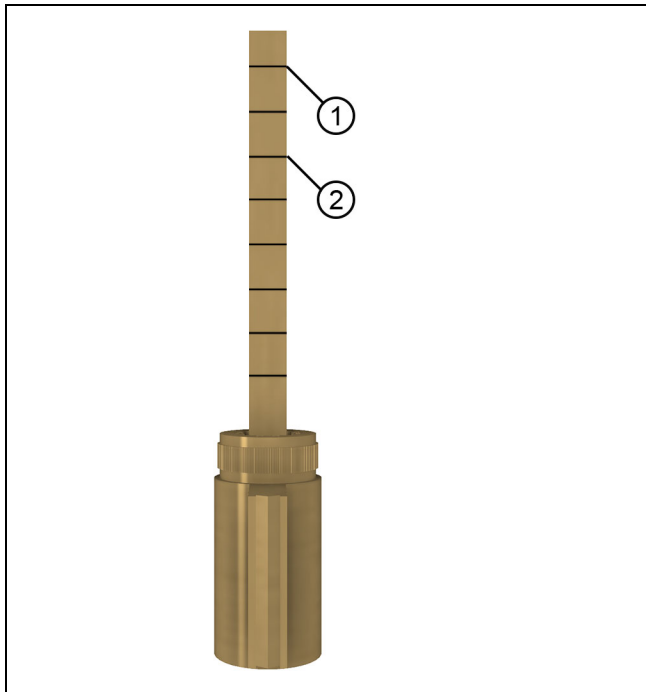


Figure 2

1	2 1/4" panel thickness, Traditional Handle
2	1 3/4" panel thickness, Traditional Handle

NOTE: Alternatively, you can use a hack saw or rotary cut off tool.

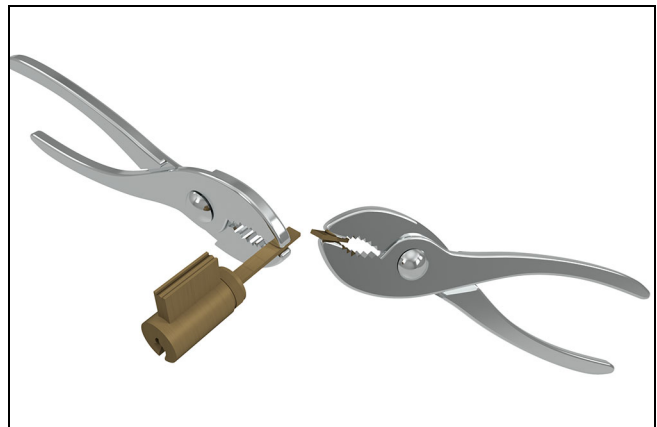


Figure 3

2. Use a pliers or similar tool to break the tail piece off.