

# Coastline Multi-Slide Screen Bumper Installation Service Instruction (Bumper Installation Kit 11862428)

## Coastline Multi-Slide Instrucciones de Servicio

**ABSTRACT:** This instruction is to install the bumpers on a Coastline Multi-Slide Door interlock Screen unit.  
**EXTRACTO:** Esta Instrucción es para instalar topes de gomas en una Mosquitera de Coastline Multi Slide Door.

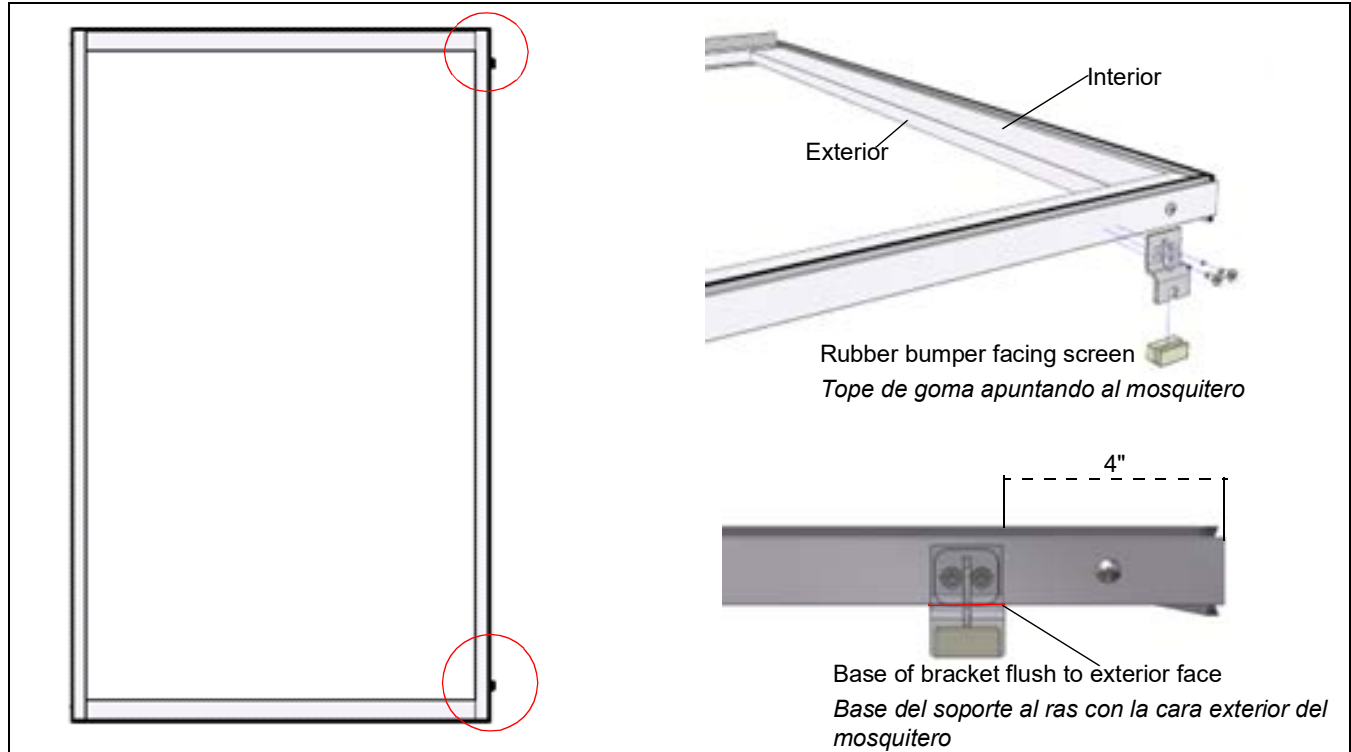


Figure 1

### Standard Kit Includes:

- 2 Bumper Brackets
- 2 Rubber Bumpers
- 4 Screws - 10-16 x 1.5", FH

### Kit Estandar Incluye:

- 2 Soportes para Topes
- 2 Topes de Goma
- 4 Tornillos – 10-16 x 1.5", FH

### Tools needed:

- Impact driver with Phillips driver bit

### Herramientas necesarias:

- Llave de impacto con punta Phillips.

1. Assemble and install bumpers as shown in [Figure 1](#).

**Ensamble e instale los topes como se indica en la Figura 1.**

**NOTE:** Two Bumpers per Interlocking Screen (Screen without lock), install on the stile with the small weather strip. Install bracket pointing to exterior face of Screen. Make sure Rubber Bumper is facing towards the screen.

**Nota:** 2 Topes por Interlocking Screen (Screen sin cerradura), instale en el perfil con la felpa (weather strip) pequeña. Instale el soporte (bracket) apuntando a la cara exterior del mosquitero. Asegúrese que la parte gruesa del tope de goma apunte hacia el mosquitero.