


































































WOOD DOUBLE HUNG PICTURE



MO (mm)	3-8 1/2 (1130)	4-4 1/2 (1334)	4-8 1/2 (1435)	5-4 1/2 (1638)	6-0 1/2 (1842)
RO (mm)	3-6 3/8 (1076)	4-2 3/8 (1280)	4-6 3/8 (1381)	5-2 3/8 (1584)	5-10 3/8 (1788)
FS (mm)	3-5 3/8 (1051)	4-1 3/8 (1254)	4-5 3/8 (1356)	5-1 3/8 (1559)	5-9 3/8 (1762)
DLO (mm)	2-10 15/16 (887)	3-6 15/16 (1091)	3-10 15/16 (1192)	4-6 15/16 (1395)	5-2 15/16 (1599)
3-6 9/16 (1081)					
3-5 1/2 (1054)					
3-5 (1041)					
2-8 1/4 (819)					
3-10 9/16 (1183)					
3-9 1/2 (1156)					
3-9 (1143)					
3-0 1/4 (921)					
4-2 9/16 (1284)					
4-1 1/2 (1257)					
4-1 (1245)					
3-4 1/4 (1022)					
4-8 9/16 (1386)					
4-5 1/2 (1359)					
4-5 (1346)					
3-8 1/4 (1124)					
4-10 9/16 (1488)					
4-9 1/2 (1461)					
4-9 (1448)					
4-0 1/4 (1226)					
5-2 9/16 (1588)					
5-1 1/2 (1562)					
5-1 (1549)					
4-4 1/4 (1327)					
5-6 9/16 (1691)					
5-5 1/2 (1664)					
5-5 (1651)					
4-8 1/4 (1429)					
5-10 9/16 (1792)					
5-9 1/2 (1765)					
5-9 (1753)					
5-0 1/4 (1530)					
6-2 9/16 (1894)					
6-1 1/2 (1867)					
6-1 (1854)					
5-4 1/4 (1632)					
6-8 9/16 (1986)					
6-5 1/2 (1969)					
6-5 (1956)					
5-8 1/4 (1734)					

Ultimate Wood Double Hung Picture: UWDHP

WOOD DOUBLE HUNG PICTURE

MO (mm)	3-8 1/2 (1130)	4-4 1/2 (1334)	4-8 1/2 (1435)	5-4 1/2 (1638)	6-0 1/2 (1842)
RO (mm)	3-6 3/8 (1076)	4-2 3/8 (1280)	4-6 3/8 (1381)	5-2 3/8 (1584)	5-10 3/8 (1788)
FS (mm)	3-5 3/8 (1051)	4-1 3/8 (1254)	4-5 3/8 (1356)	5-1 3/8 (1559)	5-9 3/8 (1762)
DLO (mm)	2-10 15/16 (887)	3-6 15/16 (1091)	3-10 15/16 (1192)	4-6 15/16 (1395)	5-2 15/16 (1599)
6-10 9/16 (2097)					
6-9 1/2 (2070)					
6-9 (2057)					
6-0 1/4 (1635)					
7-6 9/16 (2300)					
7-5 1/2 (2273)					
7-5 (2261)					
6-8 1/4 (2038)					
7-10 9/16 (2402)					
7-9 1/2 (2375)					
7-9 (2362)					
7-0 1/4 (2140)					

CONSTRUCTION DETAILS

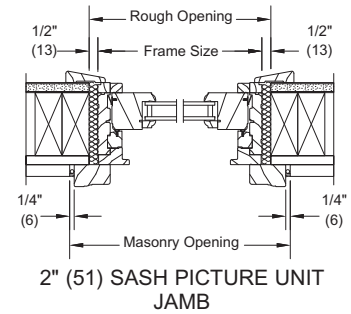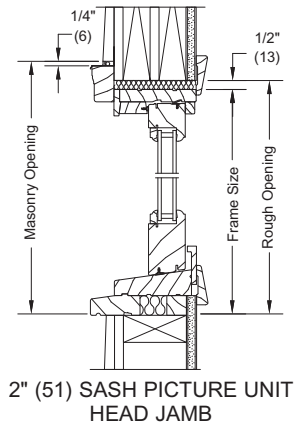

Details and Elevations not to scale.

• 2" Picture Sash shown. 1 5/8" also available.

Please consult your local Marvin representative for more information.

For further details and drawings visit the 'Tools and Documents' section at Marvin.com.